

Use the Aquor Removable Faucet with or without a garden hose attached. Regulate water flow via the ball valve shut-off for tasks such as filling buckets. The 70° angled handle provides extra leverage for an easier connection.

- Compatible with all Aquor hydrants •
- Angled for easier leverage •
- 3/4" garden hose thread attaches to any garden hose ٠
- Built-in ball valve flow flow control •
- Durable Delrin[®] polymer and Viton[®] O-rings

Compatibility	All Aquor hydrants & valves
Color	Slate Gray or Jet Black
Outlet	3/4″ GHT (m)
Backflow Protection	No
Operating Temperature	33-140 °F
Operating Water Pressure	25-125 PSI
Flow Rate	6.8 GPM @ 52 PSI
Connector Material	Acetal Resin Polymer
O-Ring Material	Fluorocarbon Rubber
Warranty	5 Years
SKU	CN-F, CN-F-BLK



Still have questions? We're here to help Monday to Friday 9AM-4PM PST. Email us at

contact@aquorwatersystems.com or give us a call at (800) 458-1749.

water systems

Connecting to your Aquor Hydrant



First thread your hose connector onto any hose.

Comfort Grip Connector shown for demonstration.

2.

To connect, align the 3 grooves on the connector with the nibs on the hydrant. Gently push in, then twist clockwise.

Comfort Grip Connector shown for demonstration.

Once you connect, the valve

3.

opens and water flow starts instantly.

Comfort Grip Connector shown for demonstration.



Disconnect and depressurize your hose before storing.

Comfort Grip Connector shown for demonstration.



Still have questions? We're here to help Monday to Friday 9AM-4PM PST. Email us at contact@aquorwatersystems.com or give us a call at (800) 458-1749.